


AIR.GO ASSISTANT

ELECTRONIC LOCK, GUIDE (ENG)

03/2025 v. 1.0

Getting to know the lock

- > Correct Code: The green light blinks twice.
- > Incorrect Code: The red light blinks three times.
- > Penalty Time: Entering five incorrect codes disables the lock for 1 minute.

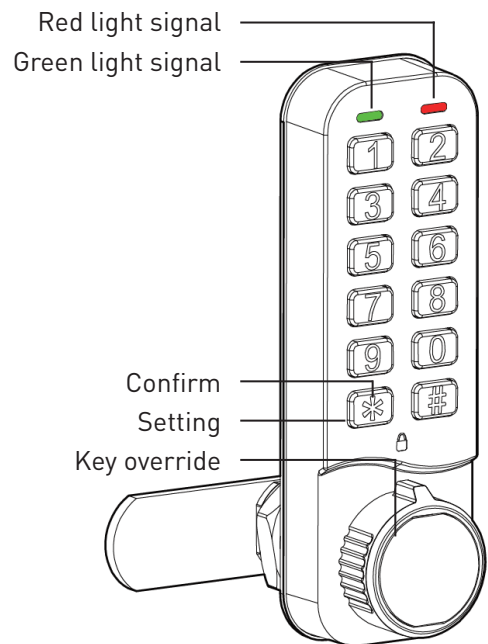

Default setting

- > User code: 1111 (4-digit figures)

Changing the default settings

- > User code: * 1111 # new 4-digit figures CODE #



Emergency Opening

- > Open the magnetic protective cover by carefully inserting your fingernail or another non-metallic tool into one of the straight edges. To avoid scratching the cover, we recommend not using any metallic objects.
- > Insert the mechanical key for emergency opening; the lock code will remain unchanged (see Fig. 1).

