

AIR.GO ASSISTANT

CLEANING AND MAINTENANCE GUIDE

Routine maintenance of the unit consists of both internal and external cleaning.

INTERNAL CLEANING AND MAINTENANCE

Dust will naturally accumulate inside the unit over time and should therefore be removed regularly.

- Pull out the drawers and carefully vacuum the inside of the unit.
- Empty the drawers regularly. After vacuuming, the interior may be wiped with a well-wrung damp cloth.
- Avoid using excessive water inside the unit, as electrical and mechanical components are not designed to withstand moisture.

EXTERNAL CLEANING AND MAINTENANCE

- Clean the unit using warm water and a neutral detergent.
- Cleaning products with a pH value between 6 and 8 may be used. Ensure that the product does not contain chlorine.
- To avoid streaks or marks, wipe the surfaces with a clean, dry cloth after cleaning.
- Do not use alkaline cleaning agents such as baking soda, bleach, soft soap or ammonia-based cleaners.
- Do not use scouring powder, steel wool or other abrasive cleaning materials, as these may scratch or damage the surfaces.
- Avoid excessive use of water on the frame, as moisture may enter the unit and affect its functionality.
- Black marks on the front panels are often caused by vacuum cleaner hoses rubbing against the surfaces during cleaning. Take care to avoid this when vacuuming around the unit.



**LET'S GET
IN TOUCH**



Niels Marcus Pedersen



+45 40 90 06 02



Niels@marcuspedersen.dk

