

AIR.GO ASSISTANT LIGHT

QUICK GUIDE (ENG)

03/2026 v. 2.0



START

Unlock the front wheels

> Unlock the front wheels by pressing the lock upwards with your foot.



Connect the power cable

> Connect the power cable at the bottom of the unit, turning the plug until it clicks.



Unlocking

> Unlock the unit with the 4-digit code and turn the lock counterclockwise.



Turn the power on

> Turn the power switch under the desktop drawer to the side where you have connected the power cable to power on the unit.



Set up the hardware

> Take out the necessary hardware to set up your workstation. If needed, use the powersocket in the drawer to connect a charger and power your computer or other devices.



Prepare the workstation

> Take out the chair from inside the unit. Pull out the side table to fold it up. Take the bin from inside the unit and attach it magnetically under the side table.



ERGONOMICS


Height adjustment

> Two arrows are located on the product's control panel. The working height of the Assistant is adjusted by pressing the up or down arrows respectively. The selected button is held down until the desired height is reached.



Work Light

> Turn on the work light using the light button in the control panel.

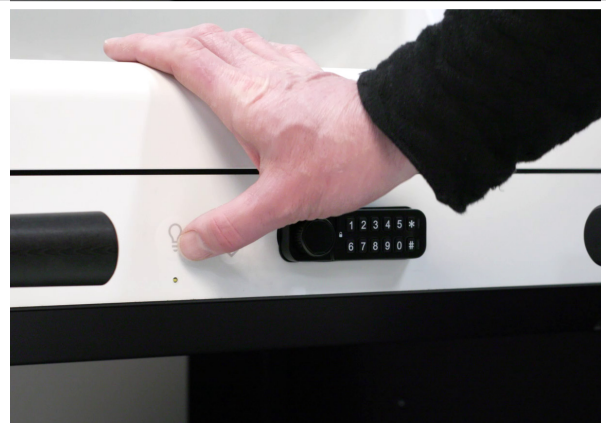

AFTER USE

Packing up the unit

> Place the bin inside the unit. Then fold down the side tables by pressing the button underneath.



Turn the power off

> Turn off the powerswitch under the desktop to shut down the unit.



Unplug the unit

> Unplug the unit and store the cable and other loose parts in the top compartment.



Locking

> Lock the unit by turning the lock clockwise



SAFETY

Driving on sloping ground

- > Air.Go Assistant can drive on ramps with a max. 5°. Never drive on steeper ramps and never drive on uneven ground.
- > Driving up and down is always done perpendicular to the sloping surface. (Never drive sideways on sloping ground, as leaning to the side could cause overturning!)



Beware of loose wires

- > Always place cables safely and secure if necessary, to the floor with strong tape so that they do not lie loose and create a risk of falling, tripping and sliding accidents.



Indoor use only

- > The device must only be used indoors, and must never be exposed to rain or heavy moisture, as water can damage the electronics.
- > The device should never be stored at less than +5°C for the sake of batteries and other electronics.



Correct use of power outlets


- > The power outlet (230V, max. 2A) may only be used for charging a mobile phone or payment terminal, and no extension cords or other electronic equipment may ever be connected!
- > The USB socket (5V) is intended for charging mobile phones.



SUPPORT

Access to step-by-step video guidance

> Scan the QR code below to access short support videos that complement this guide. The videos cover key steps and features, helping you get started with your Air.Go Assistant Light in a simple and efficient way.

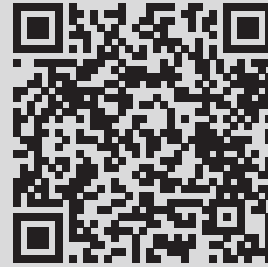

Contact and additional support

> For further assistance or inquiries, please visit our website: www.marcuspedersen.dk, or contact us at mail@marcuspedersen.dk. Our team is ready to support you.